



THIS STABILIZER TO BE USED WITH ROUGH COUNTRY SUSPENSION 4-6" LIFT ONLY

1. Locate the stabilizer cylinder and install in the passenger side mount /diff drop bracketas shown with supplied 1/2" x 2 1/2 bolt, washers and nut. Tighten hardware
2. Install the tie rod bracket on the tie rod with the supplied 5/16" u-bolts & flange nuts. Do not tighten at this time.
3. Pull the stabilizer cylinder out to where approximately 3 1/2" of piston is showing and install the supplied sleeve in the bushing. Install the cylinder on the tie rod bracket as shown with the supplied 1/2" x 2 1/2" bolt, washers and nut.
4. Tighten the tie rod end bracket u-bolts.

Photo 1



Photo 2

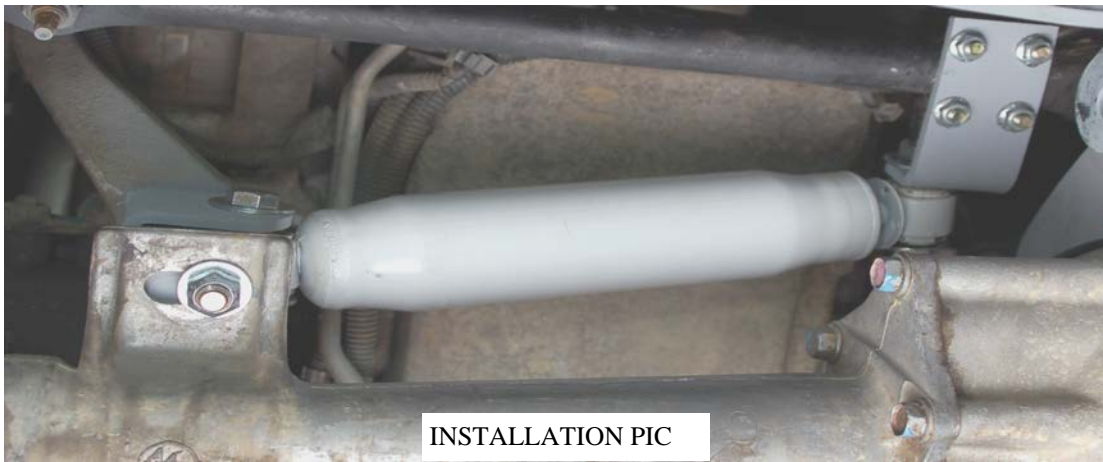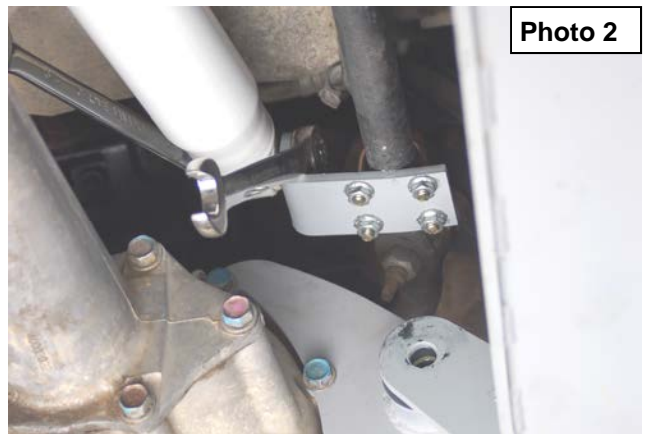

INSTALLATION PIC

CAUTION: Any and all warranties including but not limited to any express warranties, implied warranty of merchantability, or implied warranty of fitness for a particular purpose shall not apply to any product altered in any way outside the premises of the manufacturer or to any product which is not installed in accordance with the written instructions provided by the manufacturer for installation of the product.