

Polaris 2015-20 RZR (S) 900 1000/14-18 RZR XP 900 1000 Roof

Thank you for choosing Rough Country for all your UTV needs.

Please read instructions before beginning installation. Check the kit hardware against the kit contents shown below. Be sure you have all needed parts and know where they go.

If question exist, please call us @1-800-222-7023. We will be happy to answer any questions concerning this product. Check all fasteners for proper torque. Check to ensure for adequate clearance between all components. Periodically check all hardware for tightness.

KIT CONTENTS:

- (4) 1/4" x 1" Bolts
- (4) 1/4" Flat Washers
- (4) 1/4" Clip Nuts
- (4) 5' Roll of Foam Tape


TOOLS NEEDED:

- T40 Torx
- 7/16" Socket/Wrench
- Ratchet

Installation Instructions

1. Using a T40, remove the (4) bolts that attach the sun visor to the UTV. Remove the sun visor.
2. Cut the supplied adhesive foam tape into pieces and place on the top side of the ROPS.
3. Install the supplied 1/4" clip nuts in the holes near each corner of the ROPS,
4. Set the roof on the ROPS.
5. Loosely install the supplied 1/4" x 1" bolts with the 1/4" flat washers on the top side of the roof.
6. Using a 7/16" socket, tighten all hardware.

Photo 1

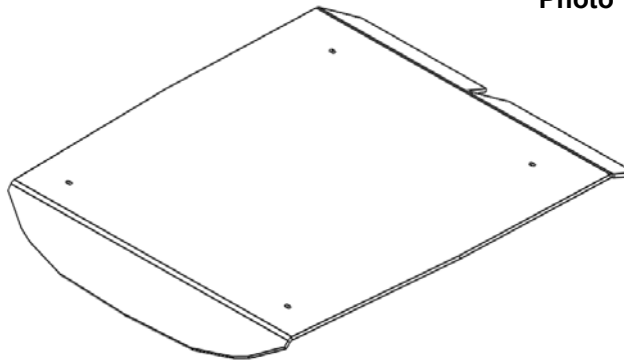

Thank you for choosing Rough Country for all your UTV needs.

By purchasing any item sold by Rough Country, LLC, the buyer expressly warrants that he/she is in compliance with all applicable, State, and Local laws and regulations regarding the purchase, ownership, and use of the item. It shall be the buyers responsibility to comply with all Federal, State and Local laws governing the sales of any items listed, illustrated or sold. The buyer expressly agrees to indemnify and hold harmless Rough Country, LLC for all claims resulting directly or indirectly from the purchase, ownership, or use of the items.

