

ROUGH COUNTRY

SUSPENSION SYSTEMS

Bolt-On/Rugged Fender Flares Chevy CK PICKUP (88-98) FIT-FF744

Please read instructions entirely before installing this product.

Hardware Included	QTY
EXTRUSION	25ft
ALCOHOL TOWELETTE	4

Hardware Included	QTY
SMALL CLIPS	14
SCREWS	6
LARGE U SHAPE CLIPS	6

Bolt Kit Included	QTY
ALLEN KEY BOLT	42
NUT	42

Ensure that both left and right hand Fender Flares suit the profile of the vehicle. Note the areas where the Fender Flares come in contact with the vehicle. NOTE: Before fitting Fender Flares remove any moldings, strips or existing flares from the wheel arch. If there is a body side molding, mark where the molding is to be cut, alternatively the Fender Flare can be cut to go around the molding. Be sure to allow enough room for the extrusion.

***PRIOR TO ANY PAINTING & INSTALLATION, PRODUCT SHOULD BE THOROUGHLY INSPECTED FOR ALL COMPONENTS LISTED ABOVE. PRODUCT SHOULD ALSO BE TEST FITTED PRIOR TO ANY PAINTING & INSTALLATION. PLEASE CONTACT ROUGH COUNTRY FOR ANY FITMENT QUESTIONS AND OR MISSING COMPONENTS.**

***For Rugged look flares begin installation at STEP 2.**

PAINTING INSTRUCTIONS – If Fender Flares are being painted; do not install edge extrusion until painting is complete. Prior to painting, clean all surfaces to be painted using clean water and a mild detergent, do not use lacquer thinner or any solvent based products. Wipe completely dry. Best results will be achieved by wiping the areas to be painted with a tack rag just prior to painting. Most automotive paints can be applied directly to the Fender Flares, however some may require a primer (check paint manufacturer specifications). Good adhesion will be achieved without sanding. Select a paint (and primer if necessary) that is suitable for rigid plastics PMMA (Acrylic). If using a paint system that requires baking, do not expose the product to temperatures above 70°C (158°F). Do not fit the extrusion or any of the hardware to the Fender Flares until the paint is completely dry.



STEP 1: Attach supplied bolts and nuts to each Fender Flare using a 3/16" Allen key and a 10.0mm socket. (wrench/socket and Allen key not supplied) Ensure inside of Fender Flares where the rubber seal is attached is clean, using the alcohol wipes provided. Wipe away any residue with a dry clean cloth.



STEP 2: Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Attach rubber seal along all areas the Fender Flare will make contact with the vehicle body.

ROUGH COUNTRY SUSPENSION SYSTEMS®

Bolt-On/Rugged Fender Flares Chevy CK PICKUP (88-98) FIT-FF744



STEP 3: Pulling at right angles to the extrusion, remove the liner from the extrusion in small portions and apply thumb pressure to ensure that it adheres to the Fender Flares.



STEP 4: Trim any unnecessary extrusion and discard.



STEP 5: Clean the body areas where the Fender Flares will make contact with a clean cloth.



STEP 6: Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the vehicle fender. To secure the Fender Flare to the body take the black metal clips and slide them over the Fender Flare and the inner wheel arch lip. Position the clip so that the barb in the clip locates in the slot of the Fender Flare. Install top center clip first working out to the shown locations.

ROUGH COUNTRY

SUSPENSION SYSTEMS

Bolt-On/Rugged Fender Flares Chevy CK PICKUP (88-98) FIT-FF744



STEP 7: Locate the lower mounting slot in Fender Flare. Position the large U shape clip by sliding clip over the Fender Flare and the inner wheel arch lip so that the barb in clip inserts into the slot in Fender Flare. Apply pressure on Fender Flare to vehicle fender while tightening screw into the clip using and Allen key. Double check the front Fender Flares to make sure all screws are tight securely fastened.

ROUGH COUNTRY

SUSPENSION SYSTEMS®

Bolt-On/Rugged Fender Flares Chevy CK PICKUP (88-98) FIT-FF744

REAR FENDER FLARE INSTALLATION




STEP 8: Attach supplied bolts and nuts to each Fender Flare using a 3/16" Allen key and a 10.0mm. (wrench/socket and Allen key not supplied) Ensure inside of Fender Flares where the rubber seal is attached is clean, using the alcohol wipes provided. Wipe away any residue with a dry clean cloth.



STEP 9: Attach the included rubber seal to the Fender Flares. Peel back 2" of the adhesive backing and position on the Fender Flare. Attach the seal to the Fender Flare, peeling back a few inches at a time. Attach rubber seal along all areas the Fender Flare will make contact with the vehicle body.



STEP 10: Pulling at right angles to the extrusion, remove the liner from the extrusion in small portions and apply thumb pressure to ensure that it adheres to the Fender Flares.

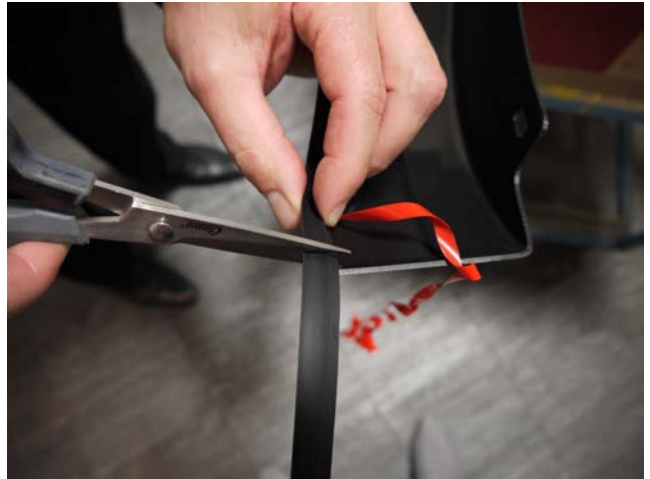

STEP 11: Trim any unnecessary extrusion and discard.

ROUGH COUNTRY SUSPENSION SYSTEMS®

Bolt-On/Rugged Fender Flares Chevy CK PICKUP (88-98) FIT-FF744



STEP 12: Clean the body areas where the Fender Flares will make contact with a clean cloth.



STEP 13: Place the Fender Flare onto the vehicle and fit into the correct position following the contours of the vehicle fender. To secure the Fender Flare to the body take the black metal clips and slide them over the Fender Flare and the inner wheel arch lip. Position the clip so that the barb in the clip locates in the slot of the Fender Flare. Install top center clip first working out to the shown locations.



STEP 14: Locate the lower mounting slots in front and rear end of Fender Flare. Position the large U shape clips by sliding clips over the Fender Flare and the inner wheel arch lip so that the barb in clip inserts into the slot in Fender Flare. Apply pressure on Fender Flare to vehicle fender while tightening screws into the clips using an Allen key. Double check the front Fender Flares to make sure all screws are tight securely fastened.